 
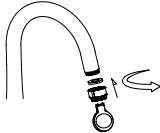
 

 



INSTALLATION INSTRUCTIONS

DUAL-FUNCTIONAL AERATOR INSTALLATION INSTRUCTIONS

雙功能起泡器安裝說明

Installation 安裝說明	<p>Remove the aerator on the spout 拆下水口水起泡器</p> 	<p>Fasten the aerator with proper connector and wrench 適合轉接頭及墊圈用扳手鎖緊出水口上</p> 	<p>Then install the aerator 再裝上起泡器</p> 
Instructions 使用說明	<p>Switch outlet modes by rotating the aerator 旋轉起泡器本體可以切換出水模式</p> 	<p>Adjust outlet direction and angle by twisting the aerator (Horizontal Direction: 360°. Vertical Direction: 45°) 扭轉起泡器本體可以調整出使用方向和角度 (水平方向360°,上下方向45°)</p> 	 <p>水平方向360°</p>

Cleaning and Maintenance : Please clean with soft and wet cloth, and do not clean with strong acid or alkali detergent.
清潔與維護 : 請用乾淨的濕軟布清潔,不可使用強酸鹼類洗滌劑擦洗.

Filter Cleaning : If you need to clean the filter, please switch off the faucet, remove the aerator to take out the washer, wash with clean water, and then reinstall.

清洗過濾網 : 需要清洗過濾網時,請先關閉龍頭開關,卸下起泡器取出墊圈,用清水沖洗乾淨後按原步驟裝回即可.

Notifications :










安裝須知 :

1. Install proper connector first before installing the aerator.
1. 先安裝適合轉接頭後再裝上起泡器.
2. Please make sure the inner side of the connector is in the washer before installing the proper connector.
2. 安裝適合轉接頭時請確認轉接頭內裝入墊圈.
3. The aerator has the M22 internal thread interface, so there is no need to further install the connector when it is connected with the 22mm screw-thread faucet.
3. 起泡器自帶M22內螺紋接口, 適配22mm外螺紋龍頭水嘴時,無需另安裝轉接頭.
4. If the aerator be leaking, please fasten it with a wrench.
4. 起泡器安裝後若出現漏水現象, 請用扳手鎖緊.

Parameters : Working Water Pressure :0.05-0.7M pa ; Environment Temperature :1-40°C ; Medium Temperature0-70°C
技術參數 : 工作水壓 :0.05-0.7M pa ; 環境溫度 :1-40°C ; 介質溫度 :0-70°C

FIXING CONTENTS

組配件內容

Aerator x 1 起泡器 (Inner Thread) 內螺紋 M22	(Inner Thread) 內螺紋 M20	(Inner Thread) 內螺紋 G1/2	(Outer Thread) 外螺紋 M20	(Outer Thread) 外螺紋 M22	(Outer Thread) 外螺紋 M24	Gaskets 墊圈	Gaskets 墊圈	Wrench 扳手
								
	M22 外螺紋 (Outer Thread)	M22 外螺紋 (Outer Thread)	M22 外螺紋 (Outer Thread)	M22 外螺紋 (Outer Thread)	M22 外螺紋 (Outer Thread)			