


INSTALLATION INSTRUCTIONS

SPOUT

出水口安裝說明

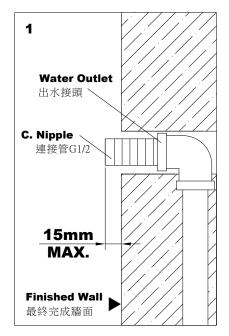

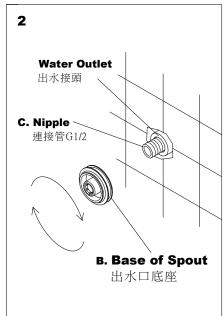

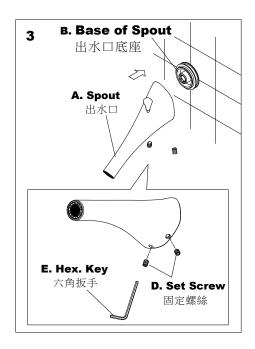

CAUTION: Prevent The Risk Of Product Damage.

注意:為增加產品使用壽命,請依說明清潔供水管路。

Remove the aerator and fully turn on the faucet and run for 1 minute after finish installation, and then turn off the water and reinstall the aerator.

完成安裝之後,把起泡器移開,把水全部轉開持續一分鐘,然後把水關掉再把起泡器裝回去。

- 1. Check the distance from water outlet to finished wall, and then choose the proper **Nipple (Option)** for connecting. NOTICE: Keep the maximum length of nipple to be out of finished wall with 15mm. 先量測牆壁接頭與接頭內牙距離,然後依量測結果取適當長度的連接管,連接管突出牆面不可超過15mm。
- Apply the pipe compound or thread sealant tape to both sides of Nipple (Option), screw Nipple (Option) into the water outlet, and then screw the Base of Spout to the Nipple till against the finished wall.

將連接管的外牙塗上牙管膠或包覆止洩帶,將出水口底座鎖上連接管,鎖緊至貼緊牆面。

3. Position **Spout** onto **Base of Spout**, and then fix **Spout** with provided **Set Screws*2** and **Hex Key**. 将出水口接上出水口底座,並調整好位置,再利用六角扳手鎖上固定螺絲*2。

FIXING CONTENTS

組配件內容

