1

MAX Install dimension 70mm
最大安裝距離 70mm

150.0
130.0

For Spout 出水口
Ø21.0~30.0

For Handle 把手
Ø30.0~35.0

INSTALLATION INSTRUCTIONS

Two-Handle Bathtub Faucet
浴缸龍頭安裝說明

CAUTION : Prevent The Risk Of Product Damage.
注意：為增加產品使用壽命，請依說明清潔供水管路。
a./ Turn on angle stops (water supplies) and run for 1 minute before connect supply hose (flexible hose) to
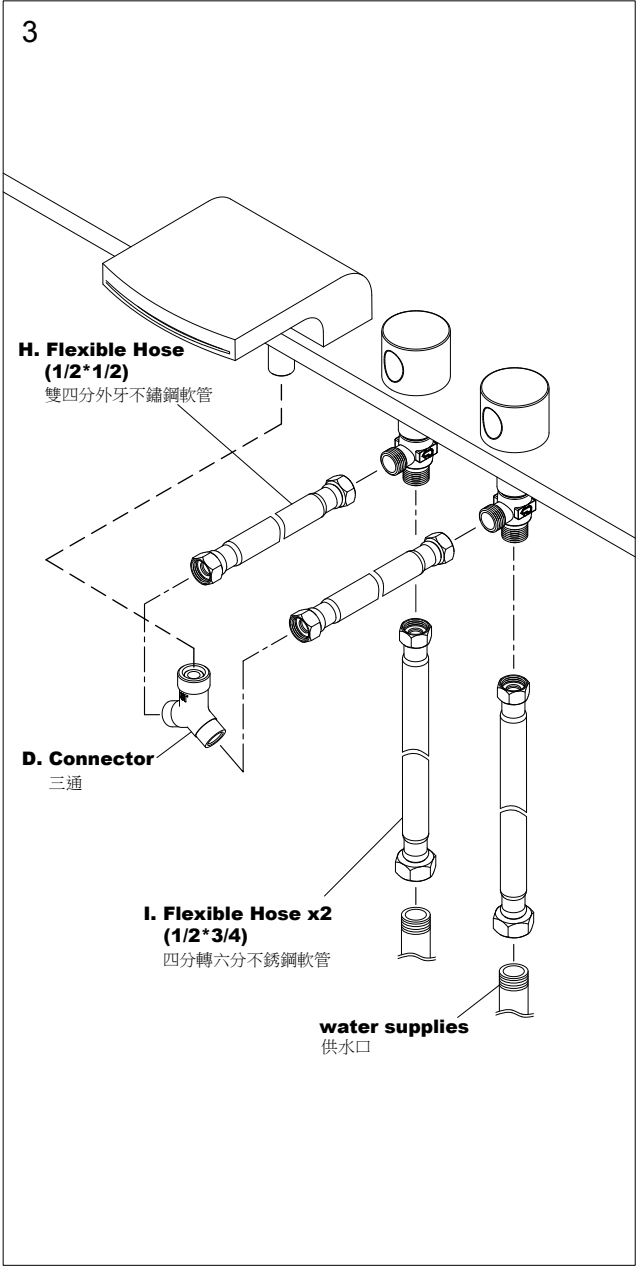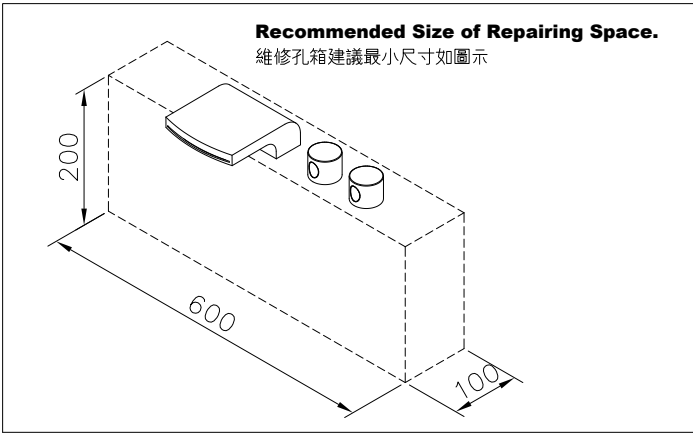faucet body. or b./
安裝編織管之前，先把供水開關全開排水一分鐘。或 b./

b./ Tightly connect faucet and angle stops with supply hose (flexible hose) to finish installation, remove aerator,
fully turn on hot and cold water valves and run for 1 minute, and then turn off water and reinstall aerator.
把龍頭、供水開關及編織管接好並鎖緊之後，把起泡器移開，把熱水及冷水全部轉開一分鐘，然後把水關掉再把起
泡器裝回去。

1. Drill 3 holes on appropriate position as Fig.1 show.
   如 Fig.1 所示在適當的位置**鎖**3個孔。

2. Connect **Thread Tube** to **Spout** and fix **Spout** with **Lock Nut** and **Washers**. Disassemble **Bases** from
   Valves, tightly fix **Valves** on countertop with **Bases** and **Nuts**. Press **Handles** onto **Valves** as Fig. 2 show.
   如 Fig.2 所示，將牙管鎖入出水口後，套入橡皮墊片和華司，並以螺帽逼緊固定。接著將冷熱閥體穿過檯面的孔
   洞，與固定座對鎖後，逼緊螺帽固定。最後將冷熱把手壓入固定座。

3. Connect **Braided Hoses** and **Fliexible Hose** as Fig. 3 show.
   如 Fig.3所示將編織管連接對應的管路即可。

3

H. Flexible Hose
(1/2*1/2)
雙四分外牙不鏽鋼軟管

D. Connector
三通

I. Flexible Hose x2
(1/2*3/4)
四分轉六分不銹鋼軟管

water supplies
供水口

2

A. Spout
出水口

B. Thread Tube
牙管

F. Handle
把手

Handle Base
把手固定座

Ø21.0~30.0

Ø30.0~35.0

Nut
固定螺帽

C. Lock Nut
(with Washers)
固定螺帽(含墊片)

A. Valve
閥體

Recommended Size of Repairing Space.
維修孔箱建議最小尺寸如圖示

200

600

100

FIXING CONTENTS
組配件內容

A. Spout 出水口	B. Thread Tube 牙管	C. Lock Nut × 1 (with Washers) 固定螺帽(含墊片)	D. Connector 三通	E. Valve x2 閥體	F. Handle(H) 把手(H)	G. Handle(C) 把手(C)	H. Flexible Hose x2 (1/2*1/2) 雙四分外牙不鏽鋼軟管	I. Flexible Hose x2 (1/2*3/4) 四分轉六分不鏽鋼軟管