

INSTALLATION INSTRUCTIONS

玻璃掛勾安裝說明

1. Available thickness of glass is 6~12mm; requested dimension of hole on glass is 10mm.


使用玻璃厚度6~12mm，鑽孔尺寸 $\phi 10\text{mm}$ 。

2. Insert the **Screw Bolt** through a **Rubber Washer**, pass it through the glass, then add another **Rubber Washer** and fasten **Hook Body (A)**. On the other side, slide **Hook Body (B)** onto the **Screw Bolt**, then secure it by tightening the **Set Screw** with a **Hex Key**.

雙邊：螺桿套入橡皮墊片穿過玻璃再套入橡皮墊片，鎖上掛勾本體(A)，另一邊再將掛勾本體(B)套入螺桿，鎖上止付螺用六角扳手鎖緊。


3. Single Robe Hook: Fix single **Hook Body** on glass with **Rubber Washer** and **Locking Base** securely, and please make sure glass is between two **Rubber Washer**.

單邊：掛勾本體底座套入橡皮墊片支撐在玻璃一邊，將另一邊橡皮墊片套入鎖定底座鎖入掛勾本體。

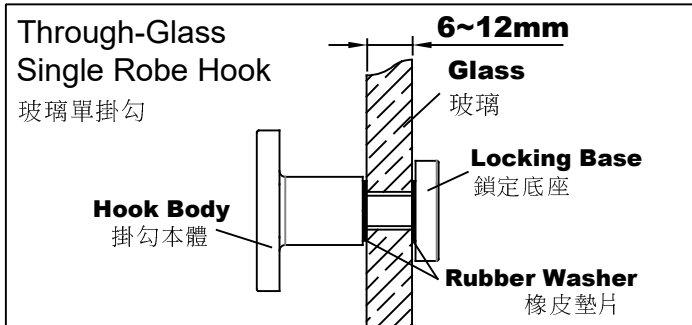

Through-Glass Double Robe Hook

玻璃雙掛勾

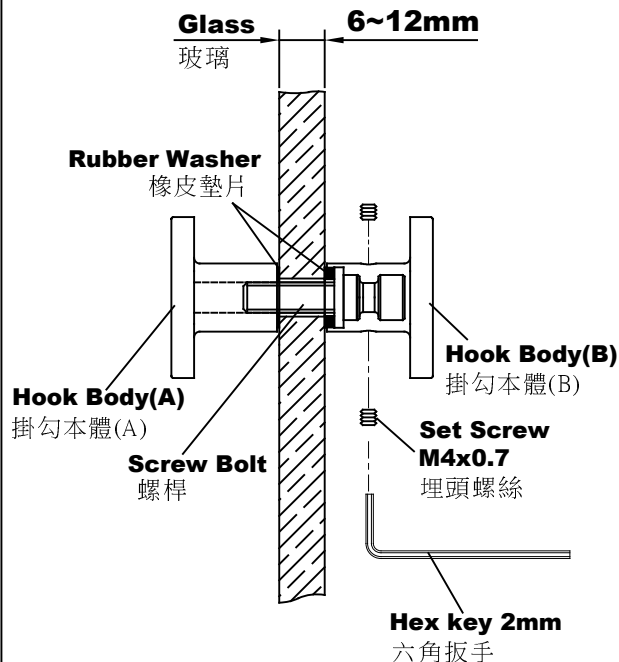

*** Make sure the Hook is vertical after installation.**
安裝後須注意掛勾的垂直度。