

INSTALLATION INSTRUCTIONS

Wall Bracket

花灑掛架組安裝說明

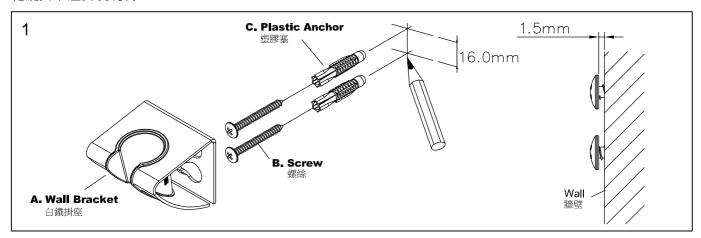

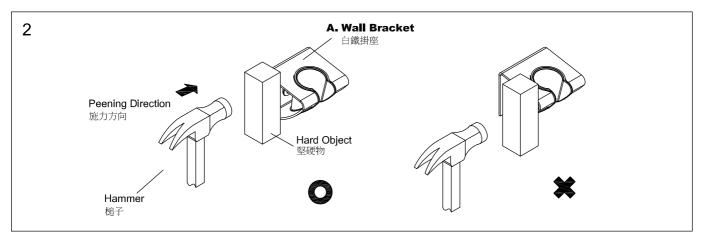

- 1. Select the proper position for product, and mark the centers of mounting holes on wall with 16mm vertical distance; using the 6mm drill-bit drills the holes at the marked positions to 4cm depth; insert the Plastic Anchors into the holes till flush with the Wall, and then fix the Screws to leave 1.5mm space from the
 - 選取預定安裝的位置。並在牆壁上畫上預定鑽孔記號,垂直線上間距約16.0mm。接著使用6mm的鑽頭鑽孔,深度4公分,崁人塑膠塞並使之齊平於牆面、將螺絲鎖人在牆內後 留下約1.5mm的間距。
- 2. Aim Screws at the holes of Wall Bracket, and then peen the Wall Bracket between a hard object with hammer or other tools to slide convex on the back of Wall Bracket into the 1.5mm space between Screws and Wall.
 - 將掛座後方兩孔置入對應的螺絲位置後,隔著堅硬物以槌子或其他工具敲動掛座,讓掛座後方的凸塊卡進螺絲預留的間隙內。
- 3. Apply the Hard Object toward the rear side of Wall Bracket, and avoid using the front side to prevent tilting or deforming. 敲打時應施力於靠牆側,切勿敲擊掛架前端,避免完工後掛座傾斜變形,如圖2。

FIXING CONTENTS

組配件內容

