


INSTALLATION INSTRUCTIONS

Thermostatic Rain Shower system

溫控淋浴柱安裝說明


Applicable Product Number:

適用產品型號:

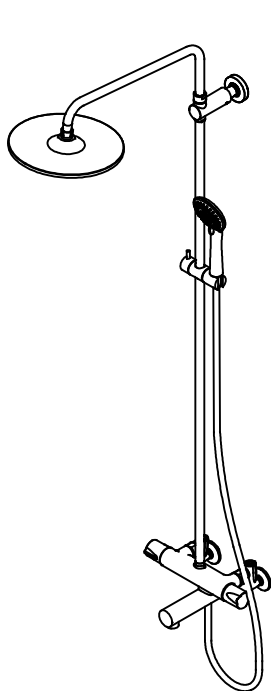

6926-TD

6771-TD

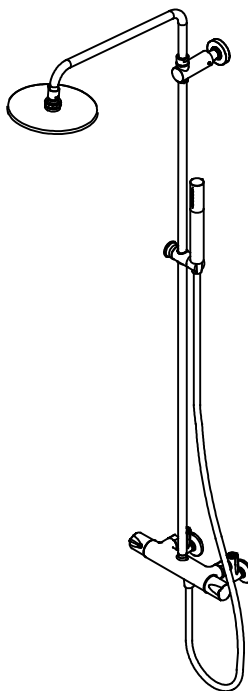

6926-TF

6771-TF

Illustrated accessories are for reference only. Actual product applies.

圖示配件僅供參考,以實際購產品為主。

CARE & CLEANING

清潔與保養

CAUTION : This product might be damaged by improper installation, acid cleaning solution, misuse, improper care and cleaning.

1. Always follow the provided INSTALLATION INSTRUCTIONS and use extreme care while installing.
2. Do not use acid cleaning solution or abrasive cleaner (Ex: Hydrochloric acid or toothpaste); test your cleaning solution on an inconspicuous area before applying to the entire surface.
3. Wipe surfaces clean and rinse completely with water immediately after applying cleaner. Do not soak with cleaners. Rinse and dry any overspray that lands on nearby surfaces.
4. Use a dampened sponge or cloth to clean surface. (Do not use abrasive material such as brush or scouring pad.)

注意：此產品有可能因為不當安裝，誤用酸性清潔劑或清潔方式不正確而造成產品受損。


1. 產品安裝時必須依照產品所附的安裝說明和操作方式安裝。
2. 不可使用含有酸性或具研磨效果的清潔劑清洗（例如：鹽酸、牙膏），請先在產品較不顯眼的地方測試您的清潔方法，然後再應用到整個表面。
3. 產品塗佈清潔劑後，應立即擦拭除污，用清水沖洗，並擦乾產品和檯面。切勿讓清潔劑在產品表面浸濕潤漬過久。
4. 請使用濕海綿或乾淨棉布擦拭產品表面。（不可使用會刮傷或具研磨材質的刷子及鋼刷）。

FIXING CONTENTS

組配件內容

A. Mixer Body X 1

龍頭本體

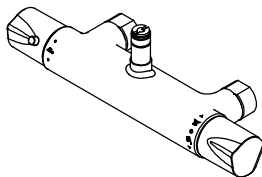


B. Flange X 2

法蘭蓋



C. Adaptor X 2

轉換接頭




D. Gasket X 2

墊片




E. Shower Hose & Gaskets X 1

蛇管(含墊片)




or



F. Sliding-Tube X 1 (120cm)

升降桿




or




G. Shower-Tube (Bend) X 1

淋浴彎管

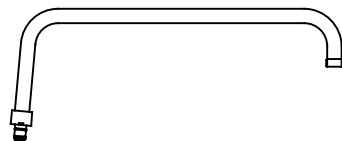

H. Pillar X 1

升降桿支架



FIXING CONTENTS

組配件內容

I. Hex Key(HEX 3.0) X 1

六角扳手(3.0mm)




J. Set Screw X 2

埋頭螺絲



K. Wall Screw X 1

螺絲




L. Plastic Anchors X 1

塑膠塞



M. Wall Bracket X 1

固定座



N. Hand Shower X 1

手持花灑


Option
(選購品)



O. Rain Shower X 1


花灑

Option
(選購品)



P. Fix Screw X 2

固定螺絲




FIXING CONTENTS

組配件內容

Q. Hex Key (HEX 2.5) X 1

六角扳手(2.5mm)

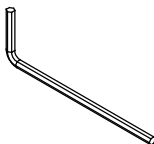

R. Decorative Cover X 1

裝飾蓋



INSTALLATION NOTE

安裝注意事項

⚠ CAUTION : Please read the following points carefully before installation.

1. The available distance between two centers of wall water-outlet can be 117mm ~ 173mm.
2. The faucet will be available at the water pressure from 0.5 to 6 kg/cm².
3. Please install hot and cold water supply pipe properly.
4. The temperature of hot water supply needs to be higher than the operating temperature. Maximum temperature of hot water supply is 70°C.

⚠ CAUTION : Risk of product damage.

When finished installation, turn the valve on and run water for 1 minute to remove any debris before using.

⚠ 注意：安裝前，請詳閱下列注意事項。

1. 確認牆壁上的出水口中心距為117~173mm如圖所示。
2. 適用水壓0.5~6(kg/cm²)。
3. 冷熱水管勿相反安裝。
4. 熱水供水溫度請高於使用時的出水溫度，熱水供水溫度勿超過70°C。

⚠ 注意：為增加產品使用壽命，請依說明清潔供水管路。


1. 安裝前，需先把供水管路全開排水持續一分鐘，去除雜質，以保持管路清潔。

INSTALLATION INSTRUCTIONS

安裝說明


1. Install the Mixer Body

安裝龍頭本體

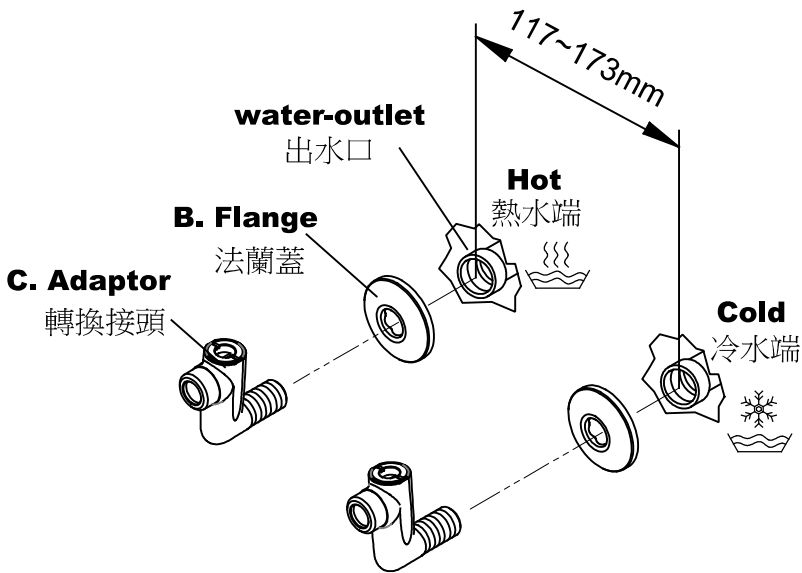

- * Cover **Flange** onto both 1/2" ends of **Adaptor**. Apply pipe compound or thread sealant tape to the thread of **Adaptor** 1/2" end, and screw it into wall **water-outlet**, meanwhile, adjust the distance between two **Adaptor** 3/4" ends to 145mm for **Mixer Body** connection.

將二個法蘭蓋各別裝上轉換接頭的1/2"牙端，轉換接頭1/2"牙塗上管牙膠或包覆止洩帶，再鎖入牆壁出水口，調整轉換接頭並且確定3/4"牙端的中心距為145mm以便安裝龍頭本體。

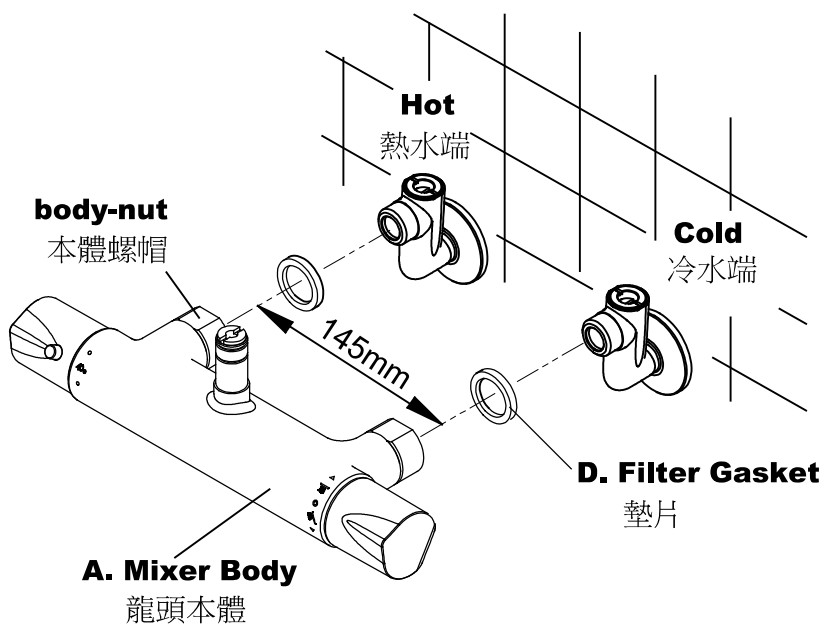

⚠ **Install HOT & COLD water supply as shown**


⚠ 冷熱水管勿相反安裝。

* Insert **Filter Gasket** into each **body-nut**, then screw the **body-nut** onto **Adaptor 3/4"** end and tighten nuts to fix the **Mixer Body**.

將二個墊片個別裝入本體螺帽，然後將本體螺帽鎖上轉換接頭 3/4"牙端並且鎖緊。

Dimensions in parentheses are for reference only. Use actual installation dimensions and required height.

()括號內的尺寸為參考尺寸,請依實施安裝及使用高度為主。

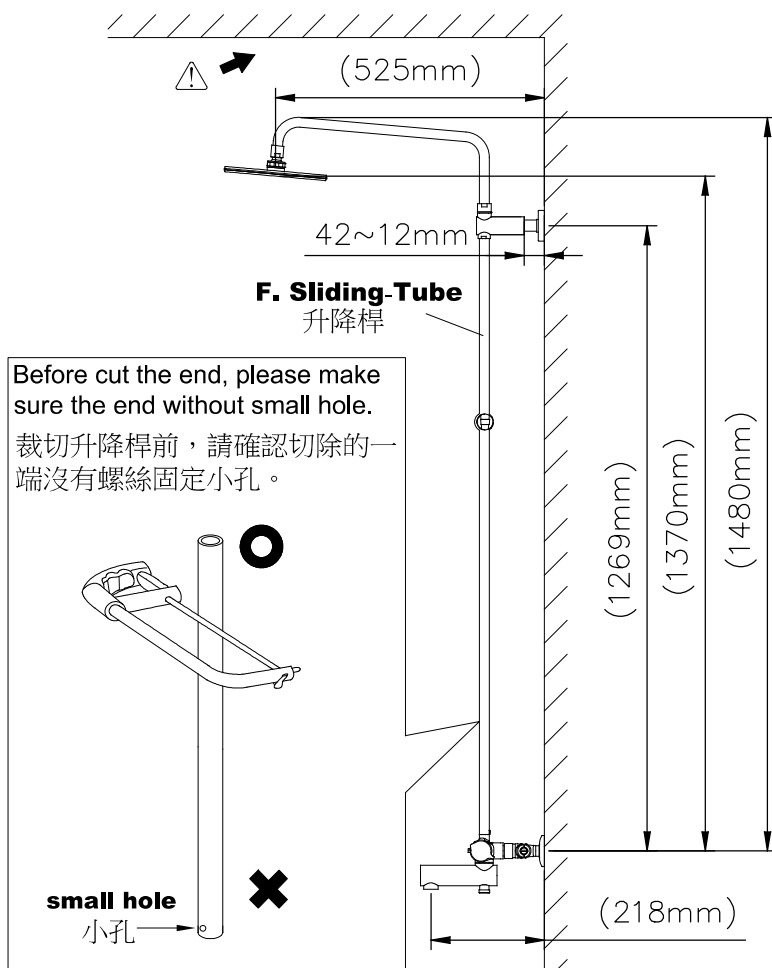


* **WARNING:** Reduce the length of **Sliding Tube** if necessary to ensure whole “Rain Shower” can be installed beneath the ceiling. Please cut the end of **Sliding Tube** without small hole.

警告：為確保“花灑”可被安裝在天花板之下，必要時請減少升降桿的距離，但請勿切除有小圓孔的方向。


2. Install the Wall Bracket

確認固定座高度及安裝

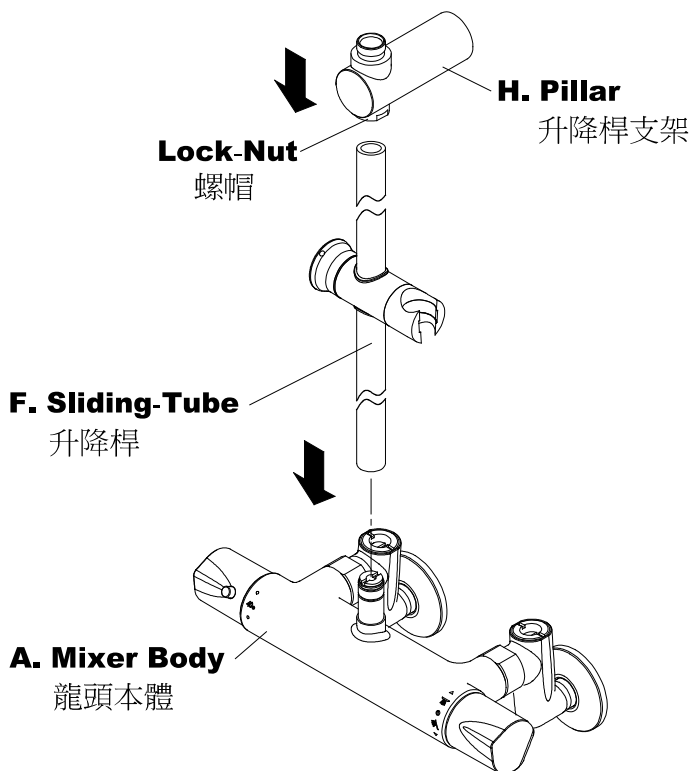


* Loosen the **Lock-Nut** under the **Pillar**, insert the **Sliding-Tube** to the end of the **Pillar** and tighten the **Lock-Nut**. Connect the other end of **Sliding-Tube** with **Mixer Body** and push down the **Sliding Tube** to the bottom.

轉鬆升降桿支架下方的螺帽，插入升降桿，確認壓到底後，再轉緊螺帽。然後將連接管端口插入龍頭本體的接頭並且將升降桿往下壓到停止在盡頭的深度。

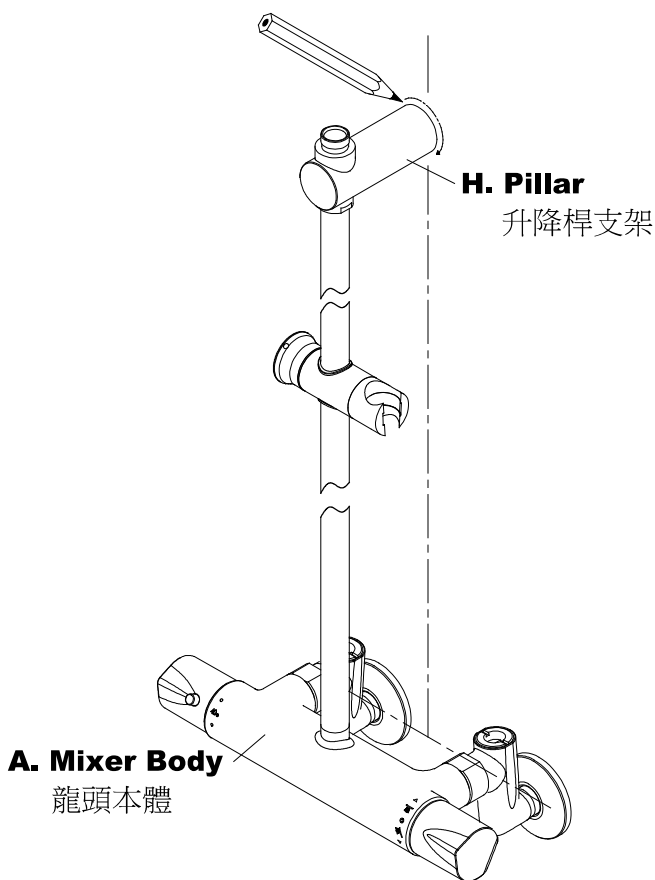

* Mark a vertical line on wall right at the middle position between two **Flanges** (Be correspondent with the center line of **Mixer Body**), and meanwhile, mark the Pillar position as shown.

從兩個法蘭蓋的正中間位置畫一條垂直線在牆上（與龍頭本體中心一致），並同時標註升降桿支架的位置，如圖所示。

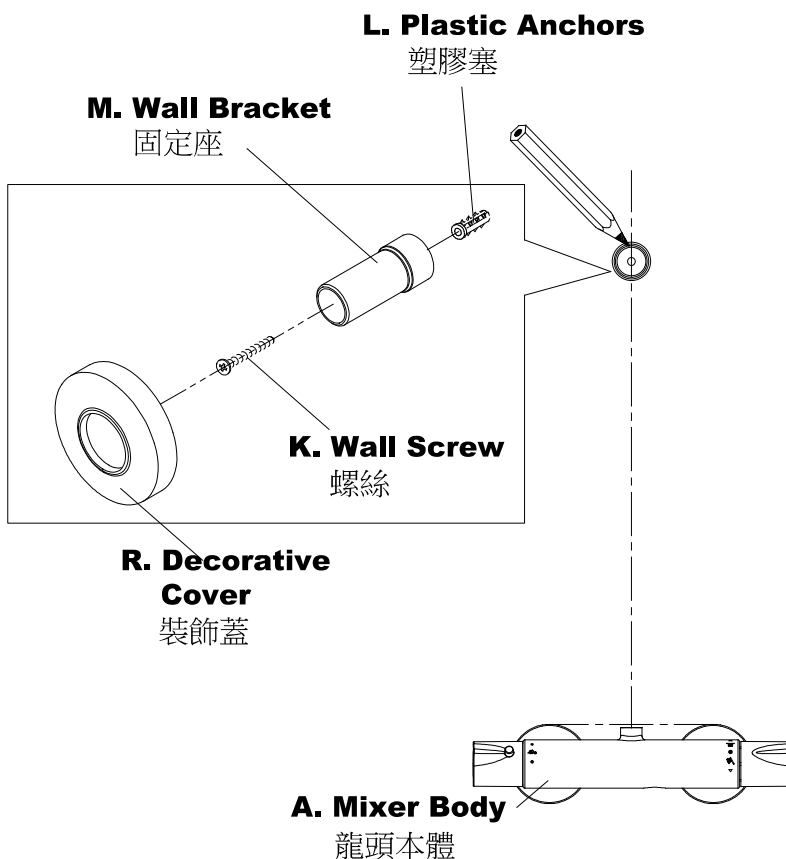


* Place the **Wall Bracket** at the center of the mark of **Pillar**. Drill holes with 6mm drill-bit to 40mm depth, insert the **Plastic Anchors** flush with wall, and then fix the **Wall Bracket** with **Wall Screws**.

取固定座放置於升降桿支架記號中心，如圖所示。鑽出孔徑6mm，深度40mm的孔後裝入塑膠塞並且須與牆壁齊平，裝上牆壁固定座以供安裝使用。


3. Install the Sliding-Tube

安裝升降桿

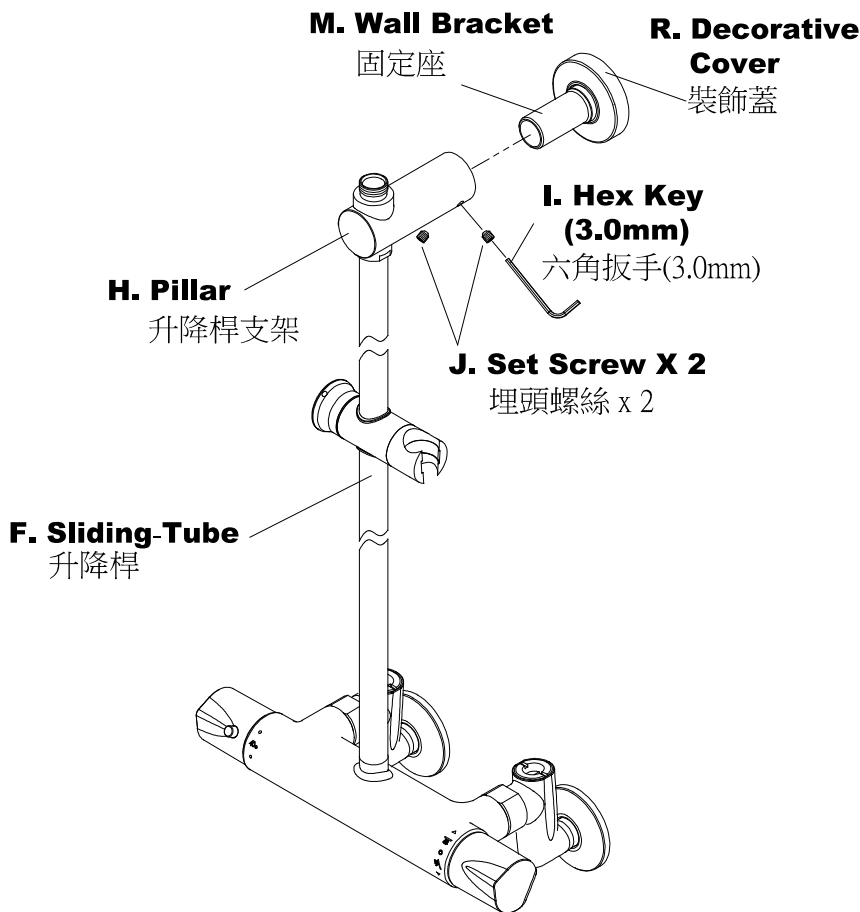

* Slide the **Decorative Cover** onto the **Wall Bracket**. Then install the **Pillar** and **Sliding Tube**, along with the connecting tube, onto the **Wall Bracket**. Secure the **Pillar** to the **Wall Bracket** with the **Set Screws** using a **Hex Key (3.0 mm)**.

將裝飾蓋套入固定座，再將升降桿支架及升降桿連同連接管裝到牆壁固定座上後，取埋頭螺絲用六角扳手將升降桿固定於固定座上。

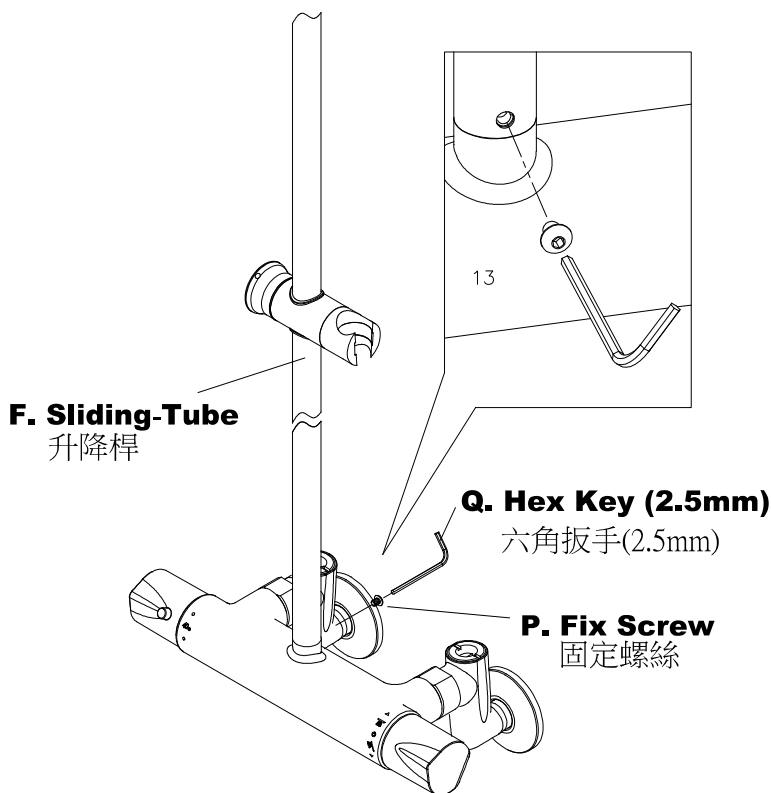


* Fix the **Sliding-Tube** on the connector of **Mixer Body** with **Fix Screw** by **Hex Key (2.5mm)** to avoid rotating.

取固定螺絲將升降桿固定於龍頭本體上，防止升降桿使用時轉動。

4. Install Rain Shower

安裝頂噴

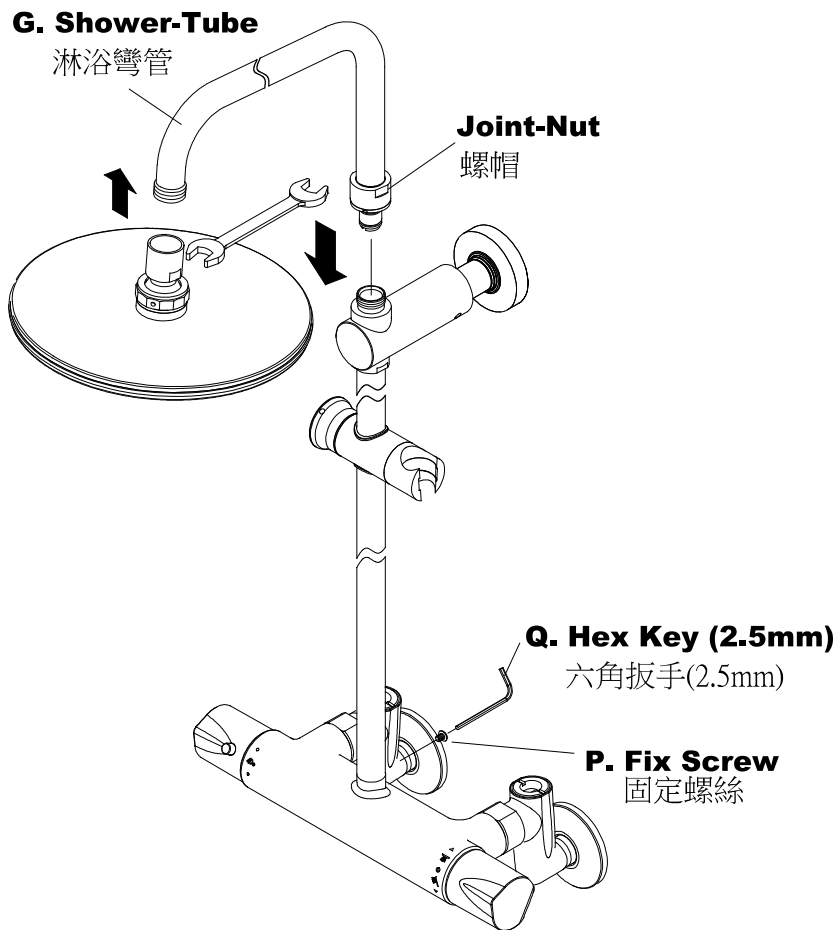

- * Apply pipe compound or sealant tape to the thread end of **Shower-Tube**, and then screw the **Rain Shower** with the **Shower-Tube**. Insert the other end into the **Pillar** and tighten the **Joint-Nut** of **Shower-Tube**.

將淋浴彎管末端的牙塗上牙管膠或止洩帶並與花灑鎖緊，然後小心的將淋浴彎管的另一端裝入升降桿支架並鎖緊淋浴彎管的螺帽。

5. Install Hand Shower

安裝手持花灑




* Connect **Hand Shower & Mixer Body** with **Shower Hose & Gaskets**.

安裝蛇管、墊片、手持花灑與龍頭本體。

6. Finish Installing

完成圖

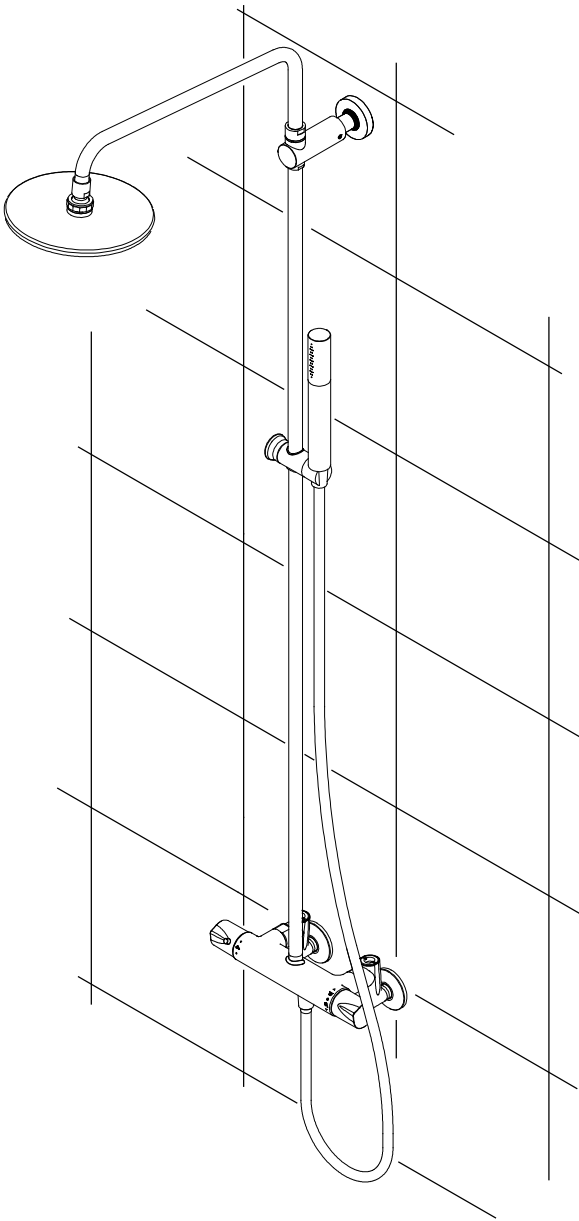

ENSURE WATER TEMPERATURE

(Necessary before first use)


確認出水溫度 (首次使用前務必執行)

1 ⚠ For different conditions (water pressure, hot water temperature), please do adjust water temperature before first use.

⚠ Regulate the temperature of hot water supply to be higher than expectation, and please notice the maximum temperature of hot water supply is 70°C.

⚠ 因使用條件(冷・熱水水壓、熱水供水溫度)不同，請於首次使用前務必校準恆溫龍頭出水溫度。

⚠ 將熱水供應溫度調整到比期望出水溫度高。為維護龍頭壽命與安全性，請注意!! 熱水器供水溫度勿超過70°C。

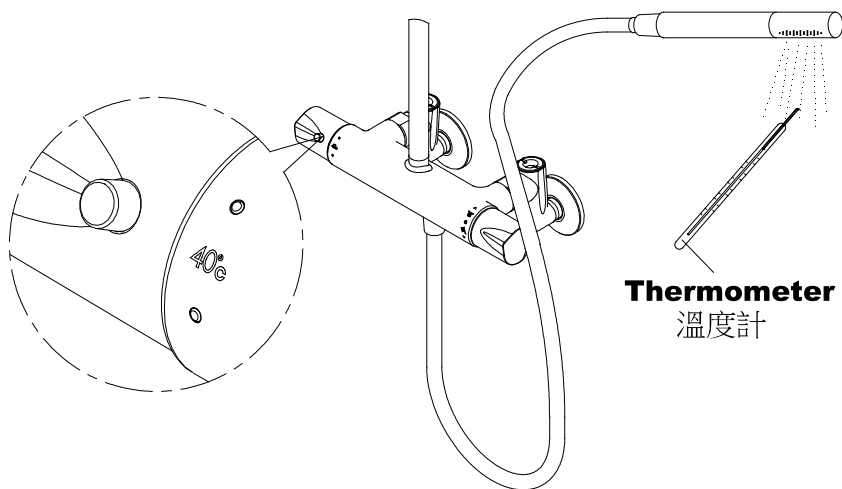

1.1 Point the Safety Button to the 40°C marked position, and divert the water flow way to spout or Hand Shower

1.2 Use thermometer to check if the temperature is between 40±2°C.

1.1 將把手上安全鈕對準40°C記號點後，切換出水位置至出水口或手持花灑。

1.2 使用溫度計確認出水溫度是否界在40±2°C之間。

2  CAUTION: If water temperature is not between $40\pm 2^{\circ}\text{C}$, please follow the below steps to adjust it.

2.1 Rotate the Handle to the position with $40\pm 2^{\circ}\text{C}$ water temperature.

※Push the button to reach the $40\pm 2^{\circ}\text{C}$ if necessary.


2.2 Hold the position of suitable temperature and pull out the Handle as the fig. shown; align the Safety Button with 40°C marked position, and then pull the Handle in to fix as the fig. shown.

 注意：出水口溫度若不符合適溫 $40^{\circ}\text{C}\pm 2^{\circ}\text{C}$ ，請依下列調整步驟進行微調。

2.1 將溫度調節把手旋轉至流出適溫熱水（ 40°C ）的位置。


※因調溫把手上於" 40°C "附近設有安全鈕若需流出高於此溫度水，請按住安全鈕並旋轉。

2.2 依圖示方向拔出溫度調節把手後，重新校對溫度調節把手上的安全鈕與" 40°C "記號點，使其對齊後，再將把手壓入固定。

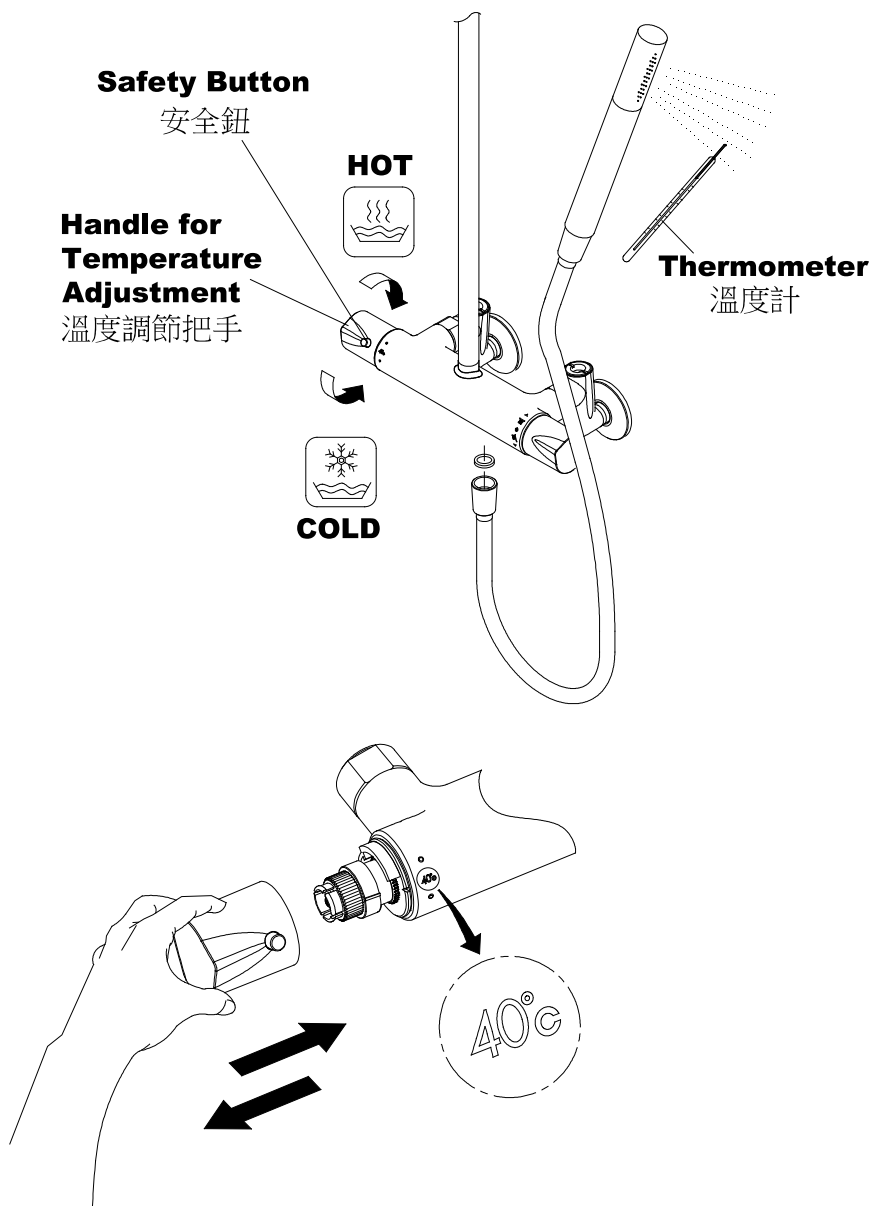

3. Limit the highest water temperature

出水最高溫度限制

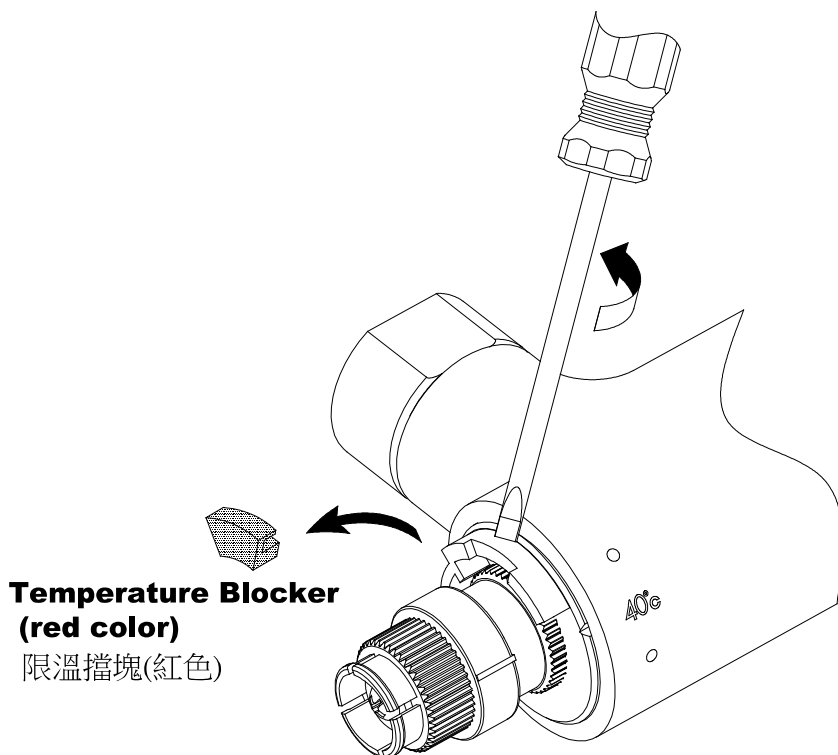

3.1 There is a Temperature Blocker (red color) limits the highest temperature with 44°C ~46°C for avoiding the accidental scald. And the Temperature Blocker (red color) could be pried out by screwdriver for getting the higher water temperature if necessary.




3.1 溫控端設有限溫紅色擋塊(A)，限制出水最高溫(44°C~46°C)，避免孩童誤轉時遭熱水燙傷，如果需要更高溫的熱水，只須用螺絲起子將紅色擋塊撬開即可。

MAINTENANCE AND CLEAN

維護與清潔

1. Clean Filter Gasket

清潔濾網

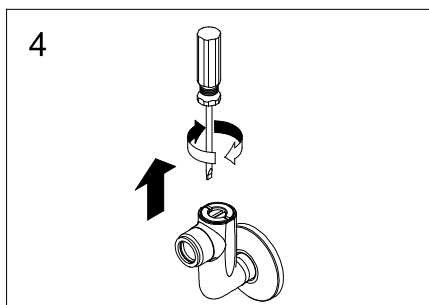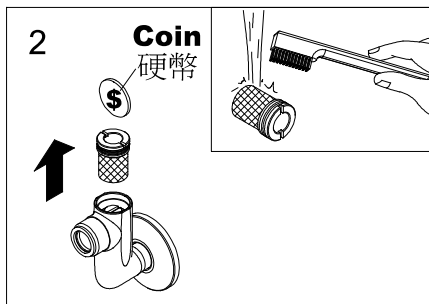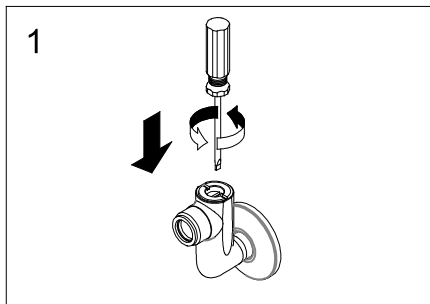




- 1.1 Use a flat-head screwdriver to tighten the stop bolt and fully shut off the water supply.
- 1.2 Remove the filter screen and clean it with a soft brush. Replace it if damaged.
- 1.3 Reinstall the filter screen after cleaning.
- 1.4 Use a flat-head screwdriver to reopen the stop bolt and check that the faucet flows normally.

- 1.1 用一字起子將止水螺栓鎖到底，確認完全止水。
- 1.2 取出濾網用軟刷沖洗刷除雜質、水垢，如濾網已破損請更換。
- 1.3 清潔完成後，再將濾網裝回。
- 1.4 用一字起子將止水螺栓鎖開啟，並確認水龍頭出水正常。

2. Clean Thermostatic Cartridge

溫控閥清洗

- ⚠ The cartridge needs to be cleaned by the following steps as water flow reduces because the hard water supply or the limescale and dirt obstruct after long term using.
 - ⚠ The water supply system needs to be shut off before disassembling the cartridge, and make sure the Safety Button points to the 40°C marked position.
 - ⚠ The thermostatic cartridge is a sensitive part, needs to be treated carefully, and could NOT be rotated as disassembling.
-
- ⚠ 如供水水質較硬或長時間使用，水垢或雜質會阻塞濾網，導致流量降低時則需按下列步驟清潔。
 - ⚠ 拆卸前必需關閉供水系統，並確保調溫把手上的安全扭與40°C刻度對齊。
 - ⚠ 溫控閥是較敏感的配件，拆卸時需特別小心，於拆卸時不可任意轉動溫控閥芯。

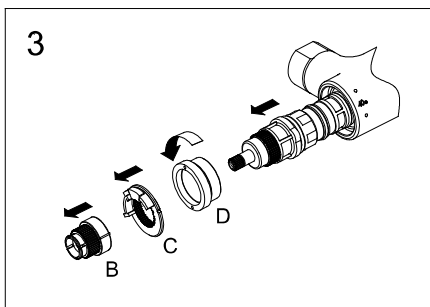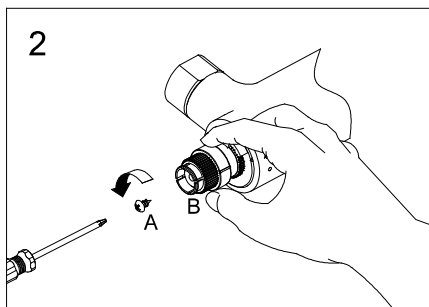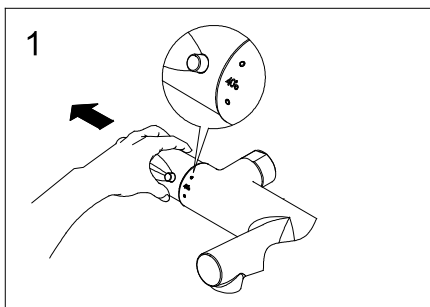

2.1 Pull out to remove the Handle.


2.2 Hold the white connector (B) and loosen the screw (A) to avoid damaging the cartridge as disassembling.

2.3 Remove the connector (B) and position ring (C), loosen the retaining ring (D) with retaining ring pliers, and then pull out the cartridge. (Notice: Do NOT rotate the cartridge.)

2.1 徒手將溫度調節把手拔下。



2.2 抓緊溫控閥芯上的白色加長接頭(B)後將螺絲(A)鬆退取出，避免鬆退時轉動幅度過大傷害閥心。

2.3 取下加長接頭(B)、拔出限位套(C)、使用兩孔螺帽專用鉗將固定螺帽(D)鬆退後，小心拉出溫控閥芯。(注意:不要任意轉動溫控閥芯。)

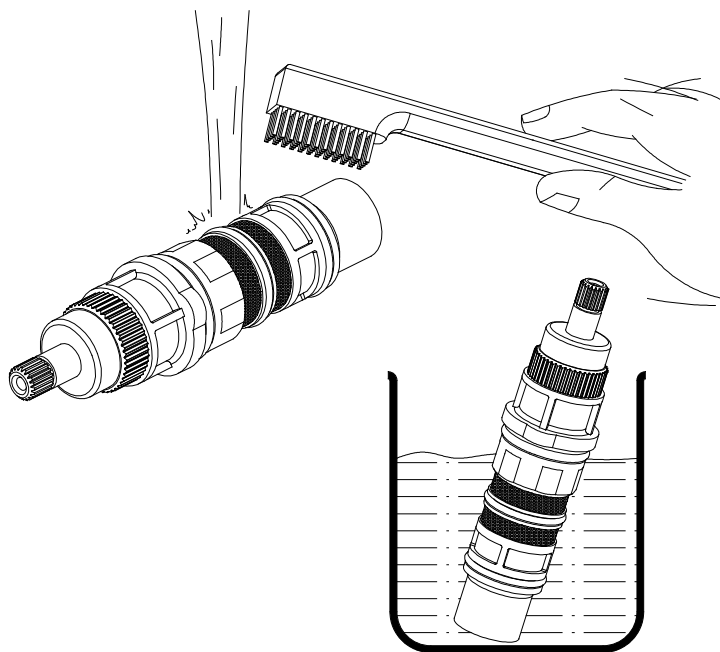

* Soak the thermostatic cartridge into the vinegar for 0.5 to 1 hour, and then use the soft brush to clean the mesh of thermostatic cartridge. (Notice: Do NOT brush too hard to damage the mesh or stuff the dirt into the mesh.)

將溫控閥芯浸泡於市售的食用醋約30分~1小時，待水垢軟化後，使用軟刷輕輕清潔溫控閥芯上的濾網，（注意!不可用力刷洗導致濾網變形或細微雜質塞入濾網內部。）

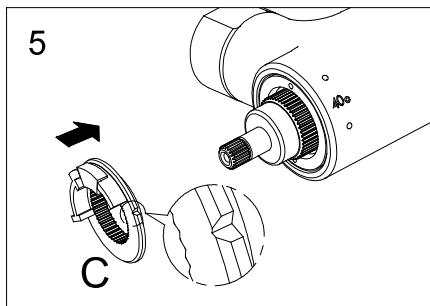
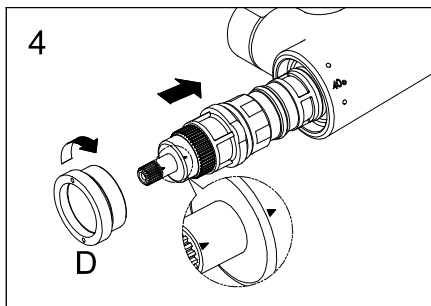


2.4 After cleaning, put thermostatic cartridge into the Mixer Body and align the triangle of white and black sides, and then using the retaining ring pliers to tighten the retaining nut for fixing cartridge.

2.5 Point the indentation of position ring (C) to the 40°C marked position, and then slide the position ring (C) into the Mixer Body.

2.4 清洗完畢後，依序將溫控閥芯放入本體，同時將溫控閥芯上白色端的三角形與黑色端的三角形對齊，再使用兩孔鉗將固定螺帽(D)鎖緊，固定閥芯。

2.5 將限位套(C)邊緣的缺口記號對準40°C的位置，套進溫控閥芯。

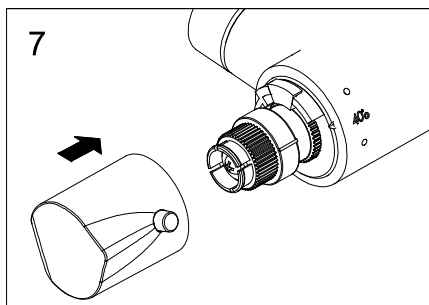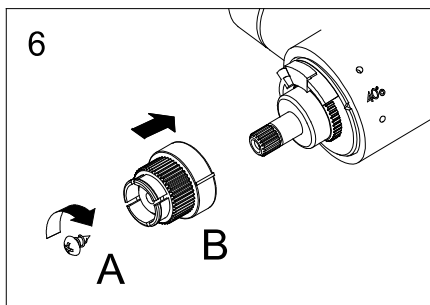

2.6 Point the straight line of connector (B) to the 40°C marked position, and then slide connector (B) into the cartridge, and then hold the connector (B) to tighten the screw (A).

⚠ If the cartridge has been rotated as tightening the screw, the straight line of connector (B) should be rotated to point the 40°C marked position. BUT the rotary range could NOT be too big to damage the cartridge.

2.7 Point the Safety Button to 40°C marked position and then push-in to fix the handle.

2.6 將加長接頭(B)上的直線記號對準40°C的位置，套進溫控閥芯，拿穩接長接頭(B)後鎖上螺絲(A)逼緊。

⚠ 鎖緊螺絲(A)的過程中如果轉動到閥芯，只需在鎖完後再將溝痕對準40°C的位置即可，但轉動幅度切勿過大，以免傷害閥芯。

2.7 最後將把手按鈕對準40°C的位置後壓入固定即可。

WARRANTY

Sheng Tai Co., Ltd. offer a three-year warranty on all of the Faucets & Bathroom Accessories from date of purchasing. The warranty covers any defect in material and workmanship during normal residential use. The following conditions of defect are charged for maintaining.

- Damage caused by accident, misuse, improper care and cleaning.
- Improper using or installation.
- Defects because of the external factors, such as erodent environment (ex. Seashore or mineral spring.), animal bites or dead body remains in product etc.
- Defect because of sand or impurity stuck in faucet water way.
- Using water not adhered to the regulations of national standard.
- Deficiency caused by freeze.
- Not showing this warranty card.
- Not filling out in the blank of name of customer, date of purchase, cost of purchase, company of installation (retail store) and stamp on warranty card.
- Sheng Tai Co., Ltd. is not responsible for labor charges, installation, or other incidental or consequential costs.

勝泰衛材股份有限公司提供所有的水龍頭及浴室配件，從購買之日起三年保固。保固範圍包括在一般住宅正常使用的期間，發現產品有任何材質和加工上的瑕疵。如瑕疵有下列情形，將收取維修費用。

- 因意外事故、不當操作使用，不當的保養維護和清洗所造成的損害。
- 不當使用或安裝。
- 外在因素造成產品的瑕疵，如易造成侵蝕的環境（如濱海或溫泉地區）、動物嚙咬或屍體存在於產品內造成的損壞。
- 因砂子或雜質卡住水龍頭水路造成的損壞。
- 沒有依循國家標準的規定使用水源造成的損壞。
- 因冰凍造成的水量不足。
- 未出示此保固卡。
- 未在空白處填寫客戶名稱，購買日期，購買成本，安裝公司（零售商店），及保證卡上未蓋章。
- 勝泰衛材股份有限公司不負責工人費用，安裝，或其他附帶或間接產生的費用。

Customer	Name		Tel	
	Address			
Product	Serial No.		Name	
	Warranty	Three year from date of purchase.		
Purchase place	Store		Tel	
	Address			
Purchase Date				
Purchase Price				

JUSTIME
www.justime.com

SHENG TAI BRASSWARE CO., LTD.

No.99 Sec.3 Chang Tsao Rd. Ho Me, Chang Hua, Taiwan

508 台灣彰化縣和美鎮彰草路3段99號

TEL: +886-4-7629971~4

FAX: +886-4-7526980

E-mail: shengtai@ms10.hinet.net

Facebook: www.facebook.com/JUSTIME